

# NEOCLEAN-EZ

**Clean optical ports with an easy push operation**



## Features

- Cleans optical connector end face with a one-push operation.
- The short main body is designed for cleaning in tight spaces.
- The stretched body attachment enables cleaning in recesses.
- Removing the attachment's cap enables cleaning plugs.

## Specifications

Product Name	NEOCLEAN-EZ1	NEOCLEAN-EZ2	NEOCLEAN-EZ3 preliminary
Model number	ATC-NE-EZ1	ATC-NE-EZ2	ATC-NE-EZ3
Connector	MU, LC	SC, SC2, FC	SC, SC2, FC, ST, E2000
Length	Main Body: 104mm With attachment:115mm Stretched body :170mm		
Cleaning area	φ 0.5mm	φ 0.8mm	
Cleaning times	Over 400 times		

NTT Advanced Technology Corporation

## Usage

The main body  
for tight spaces.



The stretched body  
for recesses.





Without the cap  
for plugs.



## Mechanism


Pushing the body feeds the cleaning thread and rotates the tip to clean the ferrule end face with a circular motion.

The guide guards the tip against accidental touch and assists smooth insertion of the tip into the optical port.

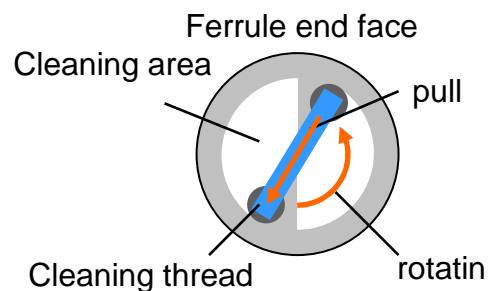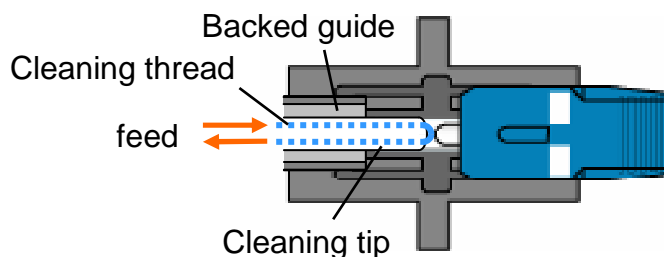


## Cleaning performance

Before cleaning

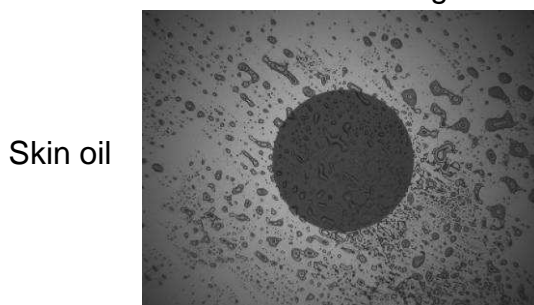

Skin oil

After cleaning

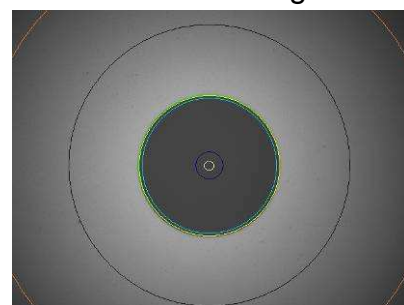

## Caution

Do not use NEOCLEAN-EZ on an optical port with a lens, for example the receiver port in an optical transceiver, or optical measurement equipment, etc. as NEOCLEAN-EZ may cause scratches on the lens surface.

\* Design and specifications are subject to change without notice.

FOCA-AA-X004-E Rev.1.03

NTT Advanced Technology Corporation  
International Business Division

TEL: +81 3 5843 0927 FAX: +81 3 5795 4150

E-mail: [moreinfo@ntt-at.com](mailto:moreinfo@ntt-at.com) <http://www.ntt-at.com>

2011.7

