

## Tools for Splicing Operation

The following items are standard tools for optical fiber splicing.



Core Alignment Fusion Splicer



Single Fiber Stripper



Optical Fiber Cleaver





Protection sleeve

Consumables for cleaning

- Cotton
- Cotton swab
- Alcohol

## Setup & Preparation Before Splicing

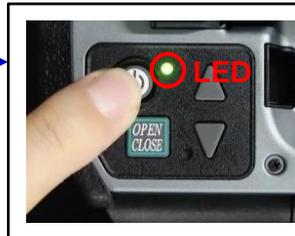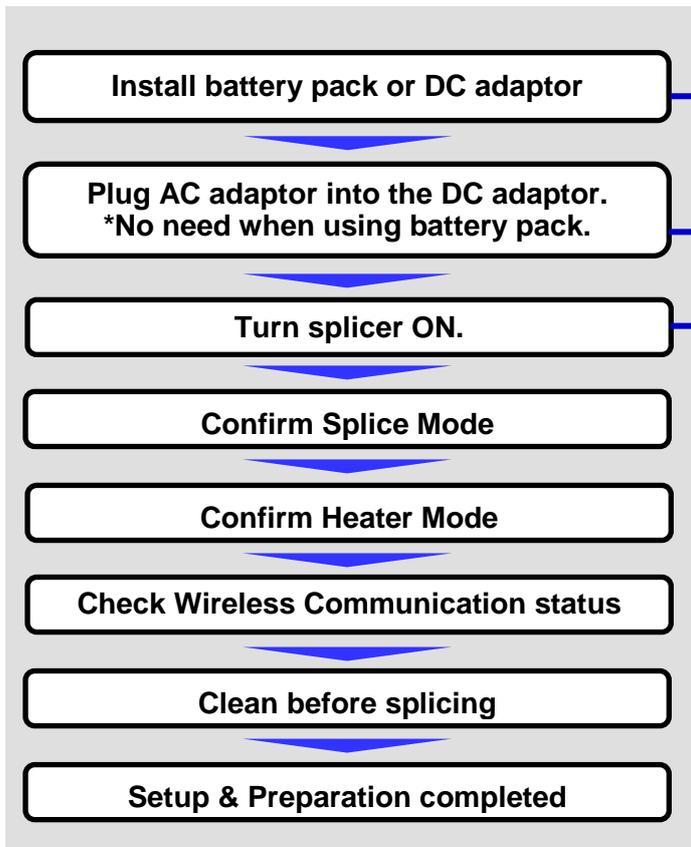

- **Turning ON**  
Press key until **green** LED turns on.
- **Turning OFF**  
Press key until **red** LED turns on.

### Splice Mode:

- Select **"SM AUTO"** to splice standard SM fibers (ITU-T G.652).
- Select **"AUTO"** mode to splice unknown fiber types. However, splice time might be longer.
- **"SM-FAST"** will shorten the splice time. However, periodic Arc Calibrations are necessary.

### Heater Mode:

- Select the adequate heater mode according to the sleeve. The [READY] screen shows the current heater mode.
- When using a protection sleeve which is not made by Fujikura, please set parameters based on the specific sleeve.

### Wireless communication with accessories:



- Splicer can connect to the CT50 cleaver and RS02/03 ribbon stripper.
- When wireless communication is established, the splicer monitors the condition of these tools. If the splicer sees that the tool has an issue, it alerts the operator with an on-screen alarm.
- After initial pairing, the devices are always paired. Communication between splicer, cleaver and stripper resumes automatically even after power cycling.
- Refer to the setting guide "SG-02" or instruction manual for wireless communication function details.






\*Basic operations can be performed from the touch screen after the power is turned on.

**Splice Operation**

- Clean coating or fiber buffer
- Place protection sleeve over fiber
- Strip fiber
- Clean fiber
- Cleave fiber
- Load fiber into splicer
- Splicing starts automatically
- Visually inspect monitor during splice
- After splicing, wind protector and sheath clamps open
- Protection sleeve  
Less than 60mm
- Protection sleeve  
60mm
- Refer to next page
- Grab the fiber at edge of sheath clamp  
: A mark
- Lift opposite fiber up,  
sleeve moves until left finger: A mark
- Place sleeve in center of tube heater
- Heating starts automatically
- Heater lid opens after finishing heating
- Check shrunk sleeve
- Completed

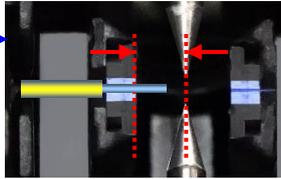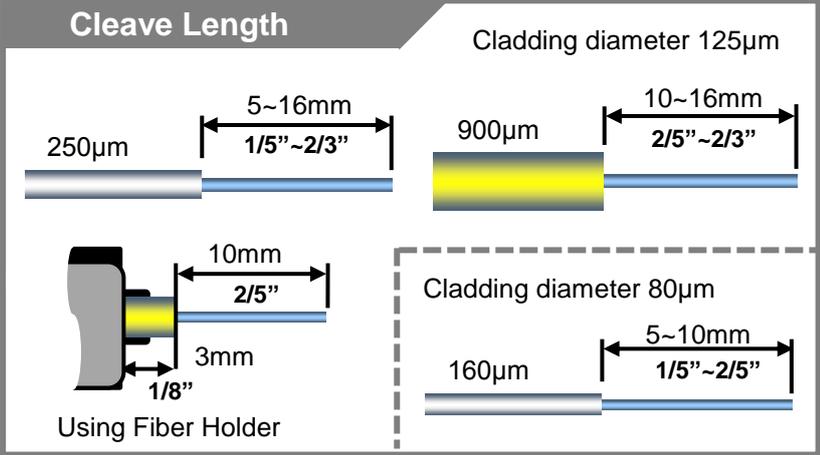



- Do not allow the cleaved fiber ends to touch anything or become contaminated.
- Place the fiber end between V-groove edge and Electrode center.

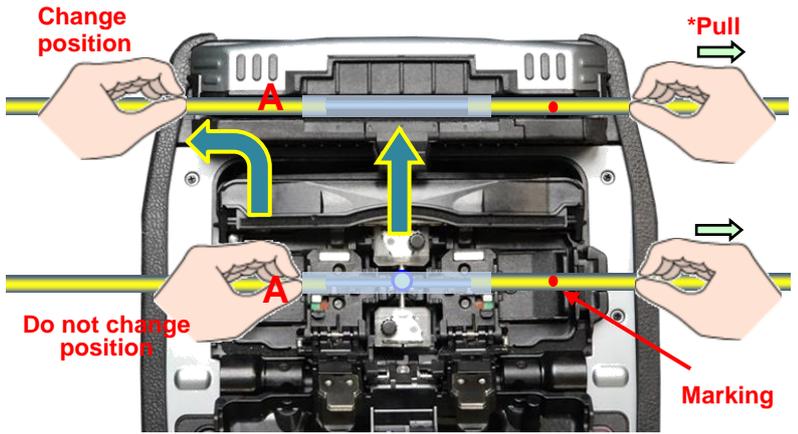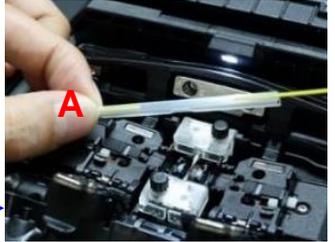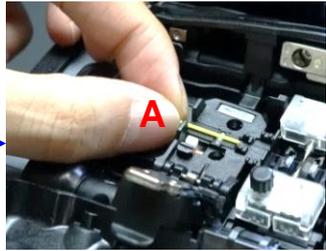

- Pull the right fiber to apply proper tension to the fiber during operation to avoid fiber bending.
- Take care to keep the position. The splice point must be centered in the sleeve.




\* Apply tension to the fiber until heater clamps hold it.

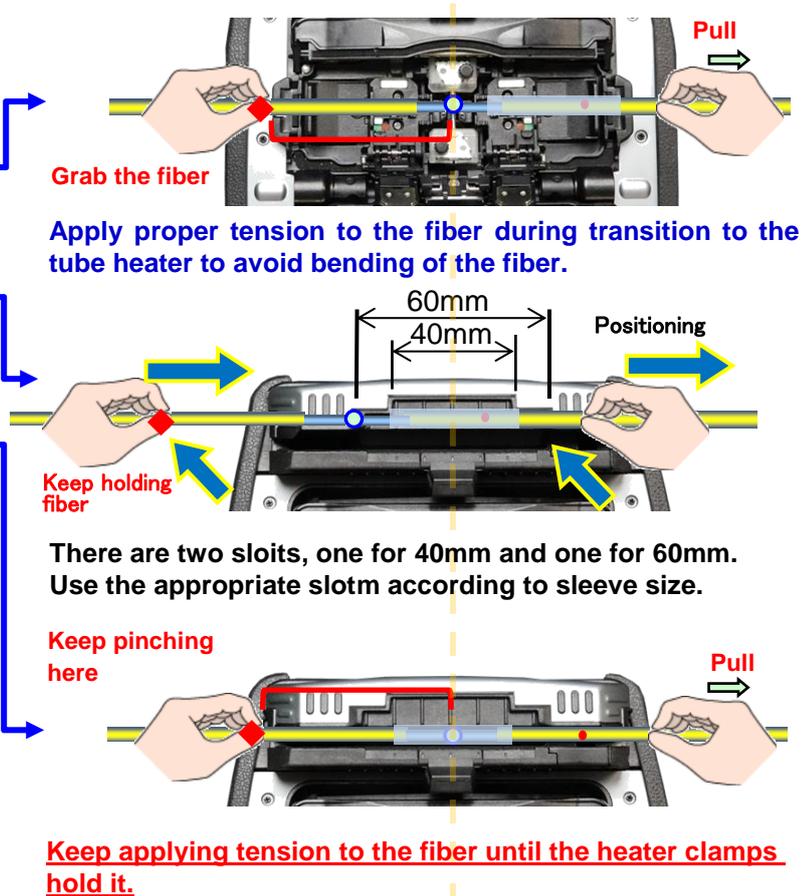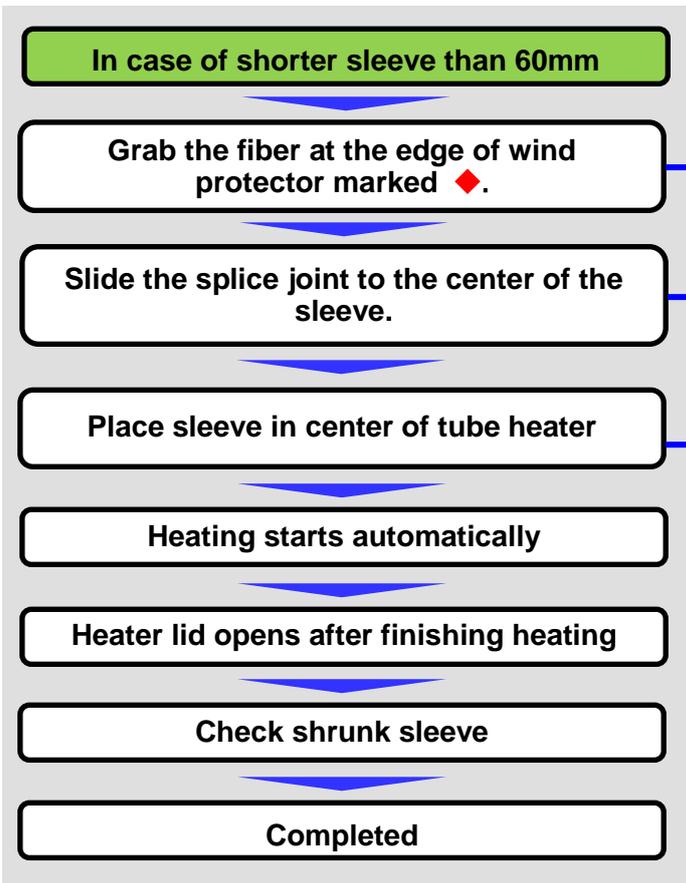


## Cleaning before Splice Operation

### V-grooves

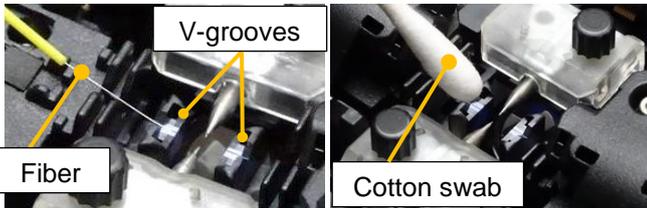

### V-groove Clamps

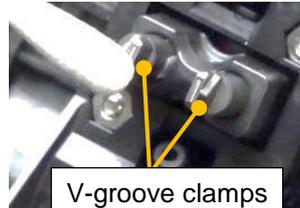

### Tools

#### Optical fiber cleaver

- Clean rubber pads.
- Clean rubber anvil.
- Clean cleaving blade.

#### Single fiber stripper


- Clean stripping blade

- Clean the bottom of the V-grooves with a thin lint-free cotton swab moistened with alcohol.
- Remove excess alcohol from V-grooves with a clean dry swab.
- Dislodge debris in the V-groove by using the cleaved fiber end face if there is a remaining deposit in the bottom of the V-groove.

### Electrode Replacement

- When the "Replace electrodes" message appears, or when the tip is damaged, replace electrodes.
- If the electrodes appear heavily worn, it is recommended to replace the electrodes even if the alarm message hasn't appeared.
- Execute [Replace Electrodes] in Maintenance Menu.

### Objective Lens

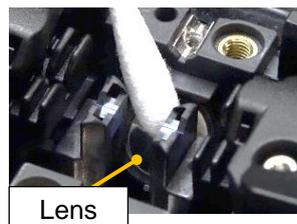

- When the lens is dirty, clean it with a thin cotton swab moistened with alcohol.
- Remove the electrodes when cleaning the lens.
- Take care not to damage the lens surface by using a rigid or hard object when cleaning.

### Cleaning Cautions

- Do not allow contact onto the electrode tips.
- Use only 99% or better purity of alcohol.
- Use new lint-free cotton swab every time you clean.

Solutions for Common Splicer Errors

| Error Message       | Reason   | Solution   |
|---------------------|--|--|
| Too Long Fiber      | <ul style="list-style-type: none"> <li>The fiber end-face is placed on the electrode centerline, or beyond it</li> <li>The cleave length (bare fiber part) is too long</li> <li>Dust or dirt is on the objective lens</li> </ul>   | <ul style="list-style-type: none"> <li>Press <b>RESET</b>, and set the fiber end-face between the electrode centerline and the V-groove edge.</li> <li>Confirm the placement of the stripped fiber end on the fiber cleaver. Check the cleave length.</li> <li>Execute [Dust Check]. Clean the lens when dust or dirt exists.</li> </ul>   |
| Too Dusty Fiber     | <ul style="list-style-type: none"> <li>Dust or dirt is on the fiber surface</li> <li>Dust or dirt is on the objective lens.</li> <li>[Cleaning Arc] time is too short or "OFF."</li> <li>Splicing fibers with unresolvable core positions using the SM or DS modes</li> <li>[Align] is set to "Core" when splicing fibers with unresolvable core positions when using other splice modes</li> <li>[Focus] is incorrectly set when using other splice modes.</li> </ul> | <ul style="list-style-type: none"> <li>Completely prepare the fiber again (strip, clean and cleave).</li> <li>Execute the [Dust Check]. Clean the lens if dust or dirt exists.</li> <li>Set the [Cleaning Arc] time to "150ms." When splicing carbon coated fibers, set to "200ms."</li> <li>Use the MM mode to splice fibers with unresolvable core positions (i.e. MM fiber).</li> <li>Set [Align] to "Clad" to splice these fibers (i.e. MM fiber).</li> <li>Set [Focus] to "Edge" to splice fibers with unresolvable core positions (i.e. MM fiber). To splice distinct core fibers, "Auto" or the correct focus value should be entered.</li> </ul> |
| ZL/ZR Motor Overrun | <ul style="list-style-type: none"> <li>The fiber is set too far back and does not reach the splice point</li> <li>The cleave length (bare fiber part) is too short.</li> <li>Splicing loose buffer tube fiber without protrusion engaged</li> </ul>  | <ul style="list-style-type: none"> <li>Press <b>RESET</b>, re-position the fiber again with the end-face closer to the electrodes.</li> <li>Confirm the placement of the stripped fiber end on the fiber cleaver. Check the cleave length.</li> <li>Flip the protrusion switch so it engages the loose buffer tube fiber.</li> </ul>   |
| Large Cleave Angle  | <ul style="list-style-type: none"> <li>Bad fiber end-face</li> <li>[Cleave Limit] was changed to a low cleave angle.</li> </ul>  | <ul style="list-style-type: none"> <li>Check the condition of the fiber cleaver. If the blade is worn, rotate the blade to a new position.</li> <li>Load the default cleave angle value from the splice mode database.</li> </ul>  |
| Cleave Shape NG     | <ul style="list-style-type: none"> <li>Bad fiber end-face</li> </ul>   | <ul style="list-style-type: none"> <li>Clean and check the condition of the fiber cleaver. If the blade is worn, rotate the blade to a new position.</li> </ul>  |
| High Estimated Loss | <ul style="list-style-type: none"> <li>Dust or dirt is on the fiber surface</li> <li>Bad fiber end-face</li> <li>Improper splice mode selected</li> <li>Unstable arc discharge</li> </ul>  | <ul style="list-style-type: none"> <li>Completely prepare the fiber again (strip, clean and cleave).</li> <li>Check the condition of the fiber cleaver. If the blade is worn, rotate the blade to a new position.</li> <li>Select proper splice mode</li> <li>Electrodes might be worn. Perform [Electrode Stabilization] or replace electrodes.</li> </ul>  |

\*This table only shows a few possible errors. Refer to the instruction manual for a more comprehensive list.



Contact Addresses

|                           |   |   |
|---------------------------|---|---|
| Fujikura Ltd.             | 1-5-1, Kiba, Koto-ku, Tokyo 135-8512, Japan<br>General inquiries: +81-3-5606-1164<br>Service & support: +81-3-5606-1534   | <a href="https://www.fujikura.com">https://www.fujikura.com</a>       |
| Fujikura Asia Ltd.        | 438A Alexandra Road,Block A Alexandra Technopark #08-03,Singapore 119967<br>General inquiries, service & support : +65-6-278-8955   | <a href="https://www.fujikura.com.sg">https://www.fujikura.com.sg</a> |
| Fujikura Europe Ltd.      | C51 Barwell Business Park, Leatherhead Road, Chessington, Surrey, KT9 2NY, UK<br>General inquiries : +44-20-8240-2000<br>Service & support : +44-20-8240-2020                     | <a href="https://www.fujikura.co.uk">https://www.fujikura.co.uk</a>   |
| AFL                       | 260, Parkway East, Duncan, SC29334, USA<br>General inquiries : +1-800-235-3423<br>Service & support : +1-800-866-3602   | <a href="https://www.aflglobal.com">https://www.aflglobal.com</a>     |
| Fujikura (CHINA) Co., Ltd | 7 <sup>th</sup> Floor, Shanghai Hang Seng Bank Tower, 1000 Lujiazui Ring Road, Pudong New Area, Shanghai 200120, CHINA<br>General inquiries, service & support : +86-21-6841-3636 | <a href="http://www.fujikura.com.cn">http://www.fujikura.com.cn</a>   |

Authorized Splicer Distributor